


## Selectable AF points for X1D

In the AF function of the X1D, it is possible to select one of 35 points (4 x 4 mm in size) to be used for focusing.

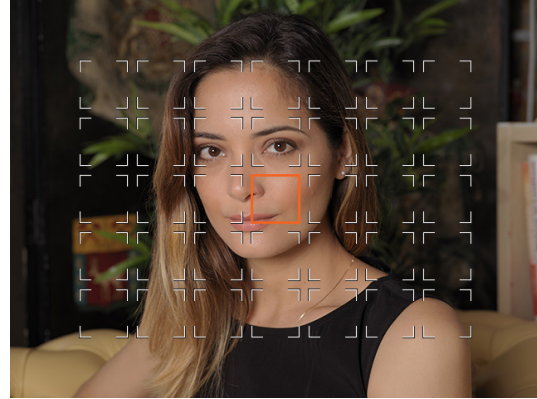


Live View mode in AF mode. Center position.



Press and hold the AF/MF button for 1 second to show a grid with possible AF points. If you use the EVF, you can use the thumb wheels to select another point for focusing. When using the rear screen, you can also select the point by touch.

Note: If the AF point is not in the center, you can click the **X** button to quickly move it back to the center again.

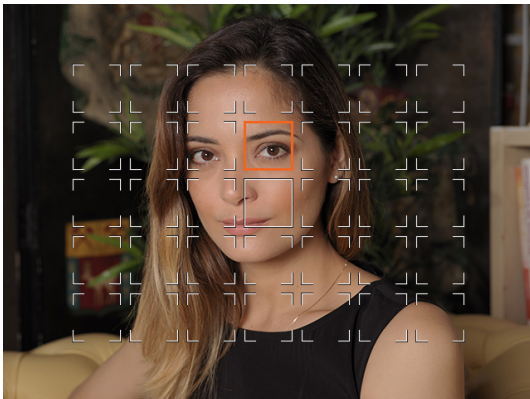

In this example, we move the focusing POINT up by turning the rear wheel one click to the left.

Photo: Damien Demolder



When the selection has been made, exit this mode with a half press on the shutter release. Now the active AF point is shown at the new location. All AF measurements will be made at this new location. You can also select the active point and exit by pressing the AF-D- or **★** button. To discard any changes, press the AE-L button.

In the menu **“Camera settings – Focus”** a new item is available: **“Reset focus point”** with the options **“After Exposure”** or **“Never”**. Default setting is **“Never”**